

Scoreboard Operation – Brewer

To start a new game:

- 6) Press **NEW GAME** then press **CLEAR**.
- 7) The clock will ask for timer direction, press **1** for down.
- 8) Asks you to enter period press **1** then **ENTER**
- 9) Enter period length, press **ENTER** again.

To add score:

- 3) Press **HOME OR GUEST SCORE** and it will increment 1 automatically
- 4) To edit score press Recall then home or guest score then edit with keypad.

To start new period:

- 3) Press **PERIOD**
- 4) Enter period number and press **ENTER**, then enter period length.

Penalties:

- 1) To add penalty, press **HOME OR GUEST PENALTY**.
- 2) The display will say “Press Enter for normal run” - Press **ENTER**
- 3) The display will prompt for “Player” – key in the 1 or 2 digit player number and press **ENTER**,
- 4) The display will prompt for penalty time. Press 2 (or possibly 4 if a major) and then **ENTER**
- 5) The display will then prompt for entry of the seconds. In most cases, press **ENTER**. If it is necessary to re-enter a partially served penalty (deleted in error or similar), key in the full minutes remaining in the previous step (say 1) and the seconds remaining here (say 31). Then press **ENTER**.
- 6) To edit penalty press **RECALL** then **HOME OR GUEST PENALTY** then
- 7) edit time as needed.
To clear penalty press **RECALL** then **HOME OR GUEST PENALTY** then
- 8) **CLEAR**.

Note: With this clock, it is important to read each and every prompt on the display on the controller – and to provide exactly the information that it is asking for. Do not blindly follow the sequence above.

Buzzer sounds automatically and will stop automatically after 5 seconds or so.